ACCUSPLIT® 705MX
OPERATING INSTRUCTIONS

BASIC STOPWATCH OPERATIONS

Master Reset
R+L (2sec) – Reset**
All segments go blank,
then come on briefly.

Event
R – Start
R – Stop (Display shows "SPLIT")
R(2sec) – Reset**

Dual Split Memory with Split Counter
R – Start (Shows Running DUAL Time)
R – Split* (Top shows CUM 1, Bottom shows LAP 1)
R – Split* (shows CUM 2, Bottom shows LAP 2)
R – Split* (Top shows CUM 3, Bottom shows LAP 3)
R – Split* (Top shows CUM 4, Bottom shows LAP 4)
R(2sec) – Reset**
*Split Counter always shows Current Split
Push C to return to Running Time

Memory Review (before Resetting)
L – Review* (Bottom shows AVE LAP Split, Top shows TOTAL ELAPSED TIME)
L – Review (Shows last DUAL Split)
L – Review (Shows next DUAL Split, in reverse order)
*Reviews at any time in reverse numerical order.
Hold down for Rapid Review.

BATTERY CHANGING
See specifications panel and drawing to right.

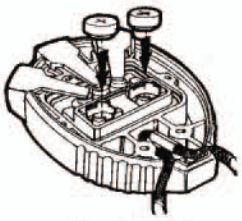

**Reset before 30 hrs. (end of range) and rollover.
After rollover, use Master Reset.

ACCUSPLIT, Inc.
3090 Independence Drive
Suite 148
Livermore, CA 94551 USA
800-935-1996 • 925-290-1900
FAX 925-290-1930
www.ACCUSPLIT.com
support@ACCUSPLIT.com

REGISTER NOW Please return your A705MX Registration to the Repair Center address in the warranty, & we will let you know about future products.

Email (preferred)_____
User_____

SPECIFICATIONS

Batteries: Batteries should last for 3 years. If display becomes dim, open back and replace with SR44 or equivalent.

Operating Temperature: 14°F to 138°F (-10°C to 59°C).

Quartz Crystal Accuracy: 0.01 sec/hr (accuracy may vary with shock, temperature or aging of crystal).

NO-PROOF-OF-PURCHASE LIMITED WARRANTY
See label on back of unit for details, or check http://support.ACCUSPLIT.com

support@accusplit.com
www.accusplit.com

ASSEMBLED IN HONG KONG
© 2005 ACCUSPLIT

Downloaded from www.Manualslib.com manuals search engine